WFS1276AW

PROGRAMME CHART

A. On/off button

B. Reset/Drain button

C. Programme selector

D. Favourite button

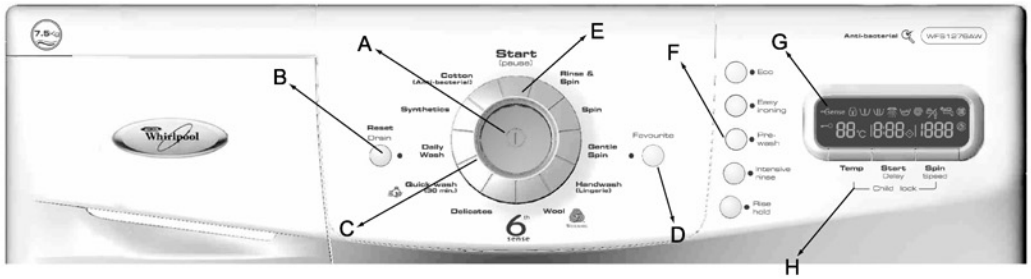

E. Start/pause button

F. Special options buttons

G. Display window

H. Temperature, Start delay, Spin speed buttons

Programme	Care Labels	Type of wash/Notes	Max. Load	Detergent and additives			Favorite	Special options							Max. Spin speed
		-for temperature selection, please follow the manufacturer's recommendation on the care label.	Kg	Prewash	Main wash	Softener		Start delay	Eco wash	Pre wash	Easy ironing	Intensive rinse	Rinse hold	spin speed	rpm
Cotton 20,30,40, ...,80,95℃	95 60 30 40	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. With heavily soiled laundry the additional "prewash" option can be selected as well. Maximum load for 20 to 30℃ programs:5.5kg.	7.5	*	Yes	*	*	*	*	*	*	*	*	*	1200
Synthetics 20, 30, 40℃	30 40	Normally soiled blouses, shirts, overalls etc. made of polyester(Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	*	*	1000(1)
Daily Wash 20,30,40,50,60℃	40 40	Slightly to normally soiled textiles made of cotton and/ or synthetics.	3.0	—	Yes	*	*	*	—	—	—	*	*	*	1200
QuickWash 20,30℃	30 30	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	—	Yes	*	*	*	—	—	—	—	*	*	1200
Delicates 20,30℃	30	Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	*	—	*	—	—	*	*	1000(1)
Wool 20,30,40℃		Only woollens with a felt-free finish, labelled with the Woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	1000(1)
HandWash 20, 30℃		Textiles made of linen, silk,wool and viscose marked as"handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	400(2)
Rinse & Spin	—	Same as the last rinse and the final spin in the "Cotton" programme.	7.5	—	—	*	*	*	—	—	—	—	*	*	1200
Spin	—	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	7.5	—	—	—	*	*	—	—	—	—	—	*	1200
Gentle Spin	—	In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.	1.0	—	—	—	*	*	—	—	—	—	—	*	1000(1)

*:optional Yes: dosing required —: can not be selected

(1) For improved garment care, spin speed is restricted to 1000 rpm in this program.

(2) For improved garment care, spin speed is restricted to 400 rpm in this program.

Whirlpool is a registered trademark of Whirlpool USA

BASIC CHART

PROGRAMME DATA

Programme	Temperature(℃)	Load(Kg)	Approx. Programme Duration(hours:minutes)*
cotton※※	70, 80, 95	7.5	2:30
Cotton	50,60	7.5	2:25
cotton※※※	40	7.5	2:14
Cotton	20,30	5.5	2:10
Synthetics	40	2.5	1:15
Synthetics	20,30	2.5	1:10
Daily wash	50,60	3.0	1:05
Daily wash	20,30,40	3.0	0:45
Quick wash	20,30	3.0	0:30
Delicates	20,30	1.5	0:40
Wool	40	1.0	0:46
Wool	20,30	1.0	0:42
Hand Wash	20,30	1.0	0:36

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

※ The remaining time indicator can deviate from the values in the table, because it takes into account the house conditions applicable at that time.

※※ To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

※※※ Reference Programme for Energy Label, AS/NZ 2040.1:2005.

ADD DETERGENTS, CLOSE THE DOOR AND ADD SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your instruction for use.

1. Push the **On/off** button,the light below the **start/pause** button is bright, the display window shows the status of default program(cotton 40℃).
2. Push the **programme selector** to the desired programme. Then push the **Temperature, Start Delay, Spin Speed** button to change the program if necessary.
3. Push the **Start/Pause** button at least 3 seconds to start the programme.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired the respective indiction lights up. When the combination of the programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

" Prewash" button

• Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

" Intensive rinse" button

• An extra rinse is added and rinse cycle prolonged.

• This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

" **Eco** " button

• With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved, if temperature selected is above 50℃.

"**Easy-ironing**" button

• Can be used together with cotton or synthetics programme to make ironing easier.

• Increases the water quantity and the clothes are spun very gently.

" **Rinse hold**" button

•The laundry remains in the last rinse water without processing to the final spin cycle to avoid creasing .

•This option is particularly recommended for the programme "Synthetics", "Everyday wash" and "Hand wash".

•It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Notes: The programme stops to "**Rinse hold**" at the time the "**Rinse hold**" light in the programme sequence indication is on. The indication lamp next sequence the "**Start/Pause**" button flashes.

Terminate the "Rinse hold" option

•Press the "**Start/Pause**" button; the programme will terminate automatically with the final spin cycle for the preset wash programme.

•If you do not wish to spin the clothes, press the "**Reset/Drain**" button and then press the "**Start/Pause**" button.

SYMBOLS IN THE DISPLAY WINDOW

When the programme is running, some symbols light up in the display window.

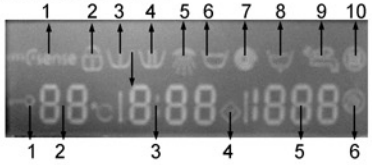

(From left to right, up to down)

The first row: (1) 6th sense washing, (2) door open, (3)prewash, (4)main wash,(5)rinse,(6)hold rinse, (7)spin, (8)drain, (9)tap closed, (10)clean pump.

The second row: (1)child safety, (2)temperature, (3)remaining time, (4)delay start, (5)spin speed, (6)service.

TEMPERATURE, DELAY START AND SPIN SPEED

Temperature, Spin speed adjustment

When you select a programme, the default temperature and spin speed shows in the screen. Press "**Temperature**", "**Spin Speed**" button to adjust if you want.

Start Delay

The "**Start Delay**" allows to run the machine at the consumer's convenience, for example, at night when the electricity might be cheaper.

•Select the programme , temperature and options.

•Press the "**Start Delay**" button to select the delay time by 23,22,21,.....1 hours,50,40,30.....10 minutes

•Press the "**Start/Pause**" button. The countdown of the delay time begins. It shows in the screen.

•Once having pressed the "**Start/Pause**" button, the remaining time preselected can be adjusted by pressing again the "**Start Delay**" button.

To cancel the "**Start Delay**"

•Before you press the "**Start/Pause**" button

Press other programme selector or press the "**Reset/Drain**" button

•After you press the "**Start/Pause**" button

Press the "**Reset/Drain**" button for at least 3 seconds, the start delay time disappears from the screen.

PROGRAMME START

Open the tap and press the "**Start/Pause**" button, the indication lamp next to the button lights up. All symbols of programme light up in the screen to show the condtion of the machine.Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the time display.

"DOOR OPEN" INDICATION

Before start and after end of a programme, the blue lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked, and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to " Cancel (Reset) a running programme before the end".

"WATER TAP CLOSE","CLEAN PUMP"

"**Water tap closed**"

The appliance has no or insufficient water supply, open the water tap; if the indication still light up, refer to the "Troubleshooting Guide" in the instruction for use.

"**Clean pump**"

Waste water can not be pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instruction for use ("Removing the filter").

"CHILD SAFETY" INDICATION

Press " **Temperature**" and "**Spin Speed**" buttons up to 3 seconds, "child safety" indication lights up in the screen. You can not operate the machine till press " temperature" and "spin speed" buttons at least 3 seconds.

FAVORITE PROGRAMME

When you have done the programme setting and do not press the "**Start/Pause**" button,press the "**Favorite**" button at least 3 seconds to set the programme as your favorite programme. You can set a favorite setting for every main wash programme. But if you want to set another favorite setting for the programme, the former setting will be covered.

PROGRAMME END

All the lights of the programme sequence indicator are off, and the door open indication lights up in the screen.

1.Press the "**On/Off**" button to disconnect the electricity, close the water tap.

2.Open the door and unload the machine.

3.Leave the door open to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "**Start/Pause**" button to pause the programme. The light around the button flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "**Start/Pause**" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent if already added on original selection. If you want to adjust the programme when the machine is running, press **"Reset/Drain"** button at least 3 seconds, then choose other programme setting button.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

•Before you select a programme, press the "**Reset/Drain**" button, then press "**Start/Pause**" button to drain if you want.

•When a programme is running, press the "**Reset/Drain**" at least 3 seconds to reset all the settings and drain. Push the programme selector to select other programmes.

Whirlpool is a registered trademark of Whirlpool USA

4619 704 82431

INSTRUCTIONS FOR USE

BEFORE USING THE WASHING MACHINE

PRECAUTIONS AND GENERAL RECOMMENDATIONS

DESCRIPTION OF THE WASHING MACHINE

OPENING/CLOSING DOOR

CHILD SAFETY (IF AVAILABLE)

BEFORE THE FIRST WASH CYCLE

PREPARATION OF THE WASHING

DETERGENTS AND ADDITIVES

REMOVING THE FILTER

DRAINING RESIDUAL WATER

CARE AND MAINTENANCE

TROUBLESHOOTING GUIDE

AFTER-SALES SERVICE

ACCESSORIES

TRANSPORT / HANDLING

ELECTRICAL CONNECTION

Thank you for your choosing a Whirlpool washing machine.

Before operating your new washing machine, please read this instruction carefully, and keep it for future reference.

Please make sure the socket is grounded securely, the water source connection is reliable. The manufacturer declines all liability and warranty for damage to property or injury to persons or animals due to non-compliance with the directions given in this instruction.

BEFORE USING THE WASHING MACHINE

1. Removing the packaging and inspection

- After unpacking, make sure that the washing machine is undamaged. If in doubt, do not use the washing machine. Contact After-Sales Service or your local retailer.
- Check that the accessories and supplied parts are all present.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.

2. Remove the transport bolts

- The washing machine is fitted with transport bolts to avoid any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed.
- After their removal, cover the openings with the 4 enclosed plastic caps.

3. Install the washing machine

- Move the appliance without lifting it by the worktop.
- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the washing machine is perfectly level (use a spirit level).

4. Water inlet

- Connect the water supply inlet hose in accordance with the regulations of your local water company.
- Water inlet

  Cold water
  （Cold water only for some models）
  Hot water
  （Depending on models）

- Water tap: 3/4" threaded hose connector
- Water pressure (flow pressure): 100-1000 KPa (1-10 bar).
- Only use a new inlet hose for connecting the washing machine to the water supply. Used hoses must not be employed anymore

5. Drain

- Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend supplied.
- If the washing machine is connected to an integrated drainage system, ensure the latter is equipped with a vent to avoid simultaneous loading and draining of water (siphoning effect).
- Fixed the drain hose securely to prevent scald during machine drainage.

6. Electrical connection

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Data regarding voltage, power consumption and protection requirements is given on the inside of the door.
- The appliance must be connected to the mains by means of a socket with an earth connection in accordance with current regulations. The washing machine must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals due to non-compliance with the directions given above.
- Do not use extension leads or multiple sockets. Make sure the capacity of the socket is powerful enough to drive the machine during heating.
- Before any maintenance on the washing machine disconnect it from the mains supply.
- After installation, access to the mains plug or to disconnection from mains supply must be ensured at all times via a double-pole switch.
- Do not operate the washing machine if it has been damaged during transport. Inform the After-Sales Service.
- Mains cable replacement is only to be carried out by After-Sales Service.
- The appliance must only be used in the household for the prescribed uses.

Minimum housing dimensions:

Width: 600 mm
Height: 850 mm
Depth: 600 mm

PRECAUTIONS AND GENERAL RECOMMENDATIONS

1. Packaging

- The packaging material is entirely recyclable, and marked with the recycling symbol ♺. Adhere to current local regulations when disposing of packaging material.

2. Disposing of packaging and scrapping old washing machines

- The washing machine is built from reusable materials. It must be disposed of in compliance with current local waste disposal regulations.
- Before scrapping, remove all detergent residues，break the door hook, and cut off the power cable so that the washing machine is made unusable.
- This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

  The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

3. Location and surroundings

- The washing machine must only be installed in closed spaces. Installation in bathroom or other places where air is humid is not recommended.
- Do not store flammable fluids near the appliance.

4. Safety

- Do not leave the appliance plugged in when not in use. Never plug or unplug the power if your hands are wet.
- Turn off the tap.
- Before any cleaning and maintenance switch off the machine or disconnect it from the mains.

- Clean the outside of the washing machine with a damp cloth. Do not use abrasive detergents.
- Never open the door forcibly or use it as a step.
- Children must not be allowed to play with the washing machine or to climb into the drum (see also the following page chapter "Child Safety").
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

DESCRIPTION OF THE WASHING MACHINE

1 Worktop
2 Control panel
3 Detergent dispenser
4 Service plate (inside the door)
5 Door
6 Child safety device (if provided, inside the door)
7 Plinth covering pump access
8 Adjustable feet

The layout of control panel depends on the model

OPENING/CLOSING DOOR

Only when the door opening light in green on control panel is lighted, the door can be opened. Never to open the door forcibly during machine running, otherwise you would damage the door lock. If you must open the door during machine running, first, turn off the power, or pause the cycle, then must wait at least 2 minutes to let the door lock released.

To open the door, hold the door handle, press the inside handle and pull the door. Close the door by pressing it without excessive force until it clicks shut.

CHILD SAFETY (IF AVAILABLE)

To protect the appliance against improper use, turn the plastic screw on the interior of the door. To do this, use a coin or similar objects.

- Slot vertical: the door will not lock.
- Slot horizontal - normal position: the door can be locked again

BEFORE THE FIRST WASH CYCLE

To remove any residual water used in testing by the manufacturer, we recommend that you carry out a short wash cycle without laundry.

1 Open the tap.

2 Close the door.

3 Pour a little detergent (about 30 ml) into the main wash chamber II of the detergent dispenser .

4. Select and start a short programme (see separate quick reference guide).

PREPARATION OF THE WASHING

1. Sort the laundry according to...

- **Type of fabric / care label symbol**

  Cottons, mixed fibres, easy care/synthetics, wool, handwash items.

  The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M0609

- **Colour**

  Separate coloured and white items. Wash new coloured articles separately.

- **Loading**

  Wash items of different sizes in the same load to improve washing efficiency and distribution in the drum.

- **Delicates**

  Wash small items (e.g. nylon stockings, belts etc.) and items with hooks (e.g. bras) in a cloth bag or pillow case with zip. Always remove curtain rings or wash curtains with the rings inside a cotton bag.

2. Empty all pockets

Coins, safety pins etc. can damage your laundry as well as the appliance drum and tub.

3. Fasteners

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

- **Stain removal**

  Blood, milk, eggs etc. are generally removed by the automatic enzyme phase of the programme.

- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain remover to the main wash chamber II of the detergent dispenser.
- Pre-treat heavily-soiled areas with stain remover if necessary.

Dyeing

- Only use dyes that are suitable for washing machines.
- Follow the Manufacturer's instructions.
- Plastic and rubber parts of the washing machine can be stained by dyes.

Loading the laundry

1 Open the door.
2 Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the quick reference guide. **Note**: overloading the machine will result in unsatisfactory washing results and creased laundry
3 Close the door.

DETERGENTS AND ADDITIVES

Always use high efficiency, low foam detergent for tumble machine.

The choice of detergent depends on:

- type of fabric (cottons, easy care/synthetics, delicate items, wool). Note: Use only specific detergents for washing wool
- colour
- the wash temperature
- degree and type of soiling

Remarks:

Any whitish residues on dark fabrics are caused by insoluble compounds used in modern phosphate-free powder detergents. If this occurs, shake or brush out the fabric or use liquid detergents. Use only detergents and additives specifically produced for domestic washing machines. When using descaling agents, dyes or bleaches for the pre-wash, make sure that they are suitable for use in domestic washing machines. Descalers could contain products which could damage your washing machine. Do not use any solvents (e.g. turpentine, benzine). Do not machine wash fabrics that have been treated with solvents or flammable liquids.

Dosage

Follow the dosage recommendations on the detergent pack. They depend

on:

- degree and type of soiling
- size of wash
- follow the detergent manufacturer's instructions for a full load;
- half load: 3/4 the amount used for a full load; Minimum load (about 1 kg):
- 1/2 the amount used for a full load
- water hardness in your area (ask for information from your water company). Soft water requires less detergent than hard water

Notes:

Too much detergent can result in excess foam formation, which reduces washing efficiency. If the washing machine detects too much foam, it may prevent spinning.

Insufficient detergent may result in grey laundry in time and also calcifies the heating system, drum and hoses.

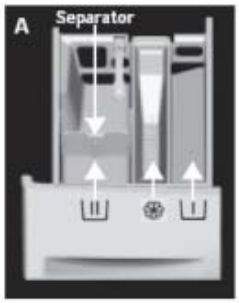

Where to put detergent and additives

The detergent drawer has three charmbers(fig. "A")

Prewash chamber I

- Detergent for the prewash

Mainwash chamber II

- Detergent for the main wash
- Stain remover
- Water softener(water hardness class 4)

Softener chamber

- Fabric softener
- Liquid starch

Pour additives only up to the "MAX" mark.

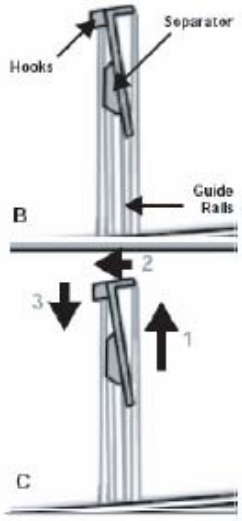

How to position the separator in the main wash chamber for powder or liquid detergent

For use with powder detergent: place the separator in the higher position. Lift the separator until its top can be reclined. Place its hooks on the upper end of the back guide rails and slightly push the separator down to fix it

(fig. "B" and "C") .

A gap should remain between the separator and the bottom of the main wash chamber. If the separator has been correctly installed (fig. "B" and "C") .:
For use with liquid detergent: place the separator in the lower position. Secure the separator in the chamber using the front guide rails. Position the separator so that it touches the bottom of the main wash chamber [II] (fig. "D")

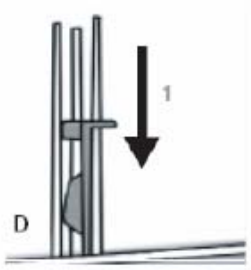

Notes:

- Keep detergents and additives in a safe, dry place out of the reach of children.
- Liquid detergents can be used for programmes with prewash. However, in this case a powder detergent must be used for the main wash.
- Do not use liquid detergents when activating the "Start Delay" function (if available on your washing machine).
- To prevent dispensing problems when using highly concentrated powder and liquid detergents, use the special detergent ball or bag supplied with the detergent and place it directly inside the drum.
- When using descaling agents, bleaches or dyes, make sure that they are suitable for washing machines. Descalers could contain components that can damage parts of your washing machine.
- Do not use any solvents in the washing machine (e.g. turpentine, benzine).
- If you use starch powder, proceed as follows:

1. Wash your laundry using the desired wash programme.
2. Prepare the starch solution according to the starch manufacturer's instructions.
3. Select the "Rinse and Spin" programme, reduce the speed to 800 rpm and start the programme.
4. Pull out the detergent drawer until you can see about 3 cm of the main wash chamber [II]
5. Pour the starch solution into the main wash chamber [II] while the water is running into the detergent drawer.
6. If there are starch residues in the detergent drawer when the programme has finished, clean the main wash chamber.

REMOVING THE FILTER

We recommend that you check and clean the filter regularly, at least two or three times a year.

Especially:

- If the appliance is not draining properly or if it fails to perform spin cycles.
- If the pump is blocked by a foreign body (e.g. buttons, coins or safety pins).

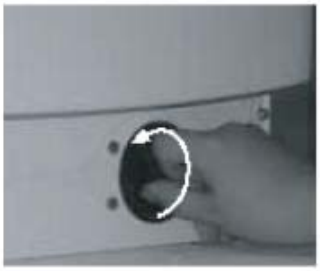

IMPORTANT: make sure the water has cooled before draining the appliance.

1 Stop the appliance and unplug it.

2 Remove the plinth by holding it tight on both sides, pushing it downward and tilting it to the front.

3 Place a container beneath it.

4 Open the filter but do not remove it completely. Slowly turn the filter counterclockwise until the water begins to drain out.

5 Wait until all the water has drained.

6 Now unscrew the filter completely and remove it.

7 Clean the filter and the filter chamber.

8 Check that the pump rotor moves freely.

9 Re-insert the filter and screw it in clockwise as far as it will go.

10 Pour about 1 litre of water into the detergent drawer to reactivate the "Eco system". Check that the filter is inserted properly and securely.

11 Reinstall the plinth.

12 Plug in the appliance once again.

13 Select a programme and start it.

DRAINING RESIDUAL WATER

Before emptying the residual water, switch the appliance off and unplug it from the mains socket. Remove the plinth. Place a container beneath it.

1. Open the filter but do not remove it completely. Slowly turn the filter counterclockwise until the water begins to drain out
2. Wait until all the water has drained.
3. Now unscrew the filter completely and remove it.
4. Tilt the appliance forwards carefully to allow the water to flow out.
5. Re-insert the filter and screw it in clockwise as far as it will go.
6. Reinstall the plinth.

Before using the washing machine again:

1. Pour approx. 1 litre of water into the detergent drawer to reactivate the "Eco system".
2. Plug in the appliance once again.

CARE AND MAINTENANCE

Appliance exterior and control panel

- Can be washed down with a soft, damp cloth.
- A little neutral detergent (non abrasive) can also be used.
- Dry with a soft cloth.

Door seal

- Clean with a damp cloth when necessary.
- Check the condition of the door seal periodically

Filter

- Check and clean the filter regularly, at least two or three times a year (see "Removing the filter").

Do not use flammable fluids for cleaning the appliance.

Detergent dispenser

1. Press the release lever in the main wash compartment downward and remove the drawer (fig. "A").
2. Remove the cover grid from the fabric softener compart ment. Remove the separator from the main wash compart ment by pulling it upward (fig. "B").
3. Wash all the parts under running water.
4. Refit the separator and the grid in the detergent drawer and fit the drawer back inside its housing.

Water supply hose

Check the supply hose regularly for brittleness and cracks and replace it if necessary using a new hose of the same type (available from After-Sales Service or specialist dealer). If your supply hose has a transparent hose coating (fig. "**C**"), periodically check the colour of the transparent coating. If the coating begins to turn red, this is an indication that the hose may have a leak and should be replaced. Contact our After-Sales Service team or specialist dealer to obtain a replacement hose.

Mesh filter for water connection

Check and clean regularly.

For washing machines with an inlet hose as shown on pictures "A", "B" or "C" (depending on the model):

1. Close the tap and loosen the inlet hose on the tap.
2. Clean the internal mesh filter and screw the water inlet hose back onto the tap.
3. Now unscrew the inlet hose on the rear of the washing machine.
4. Pull off the mesh filter from the washing machine connection with universal pliers and clean it.
5. Refit the mesh filter and screw the inlet hose on again.
6. Turn on the tap and ensure that the connections are completely water-tight.

TROUBLESHOOTING GUIDE

Depending on the model, your washing machine is equipped with various automatic safety functions. This enables faults to be detected in good time and the safety system can react appropriately. These faults are frequently so minor that they can be removed within a few minutes.

The washing machine will not start, no indicator lamps are on.

Check whether:

- the mains plug is inserted into the socket;
- the wall socket is functioning correctly (use a table lamp or similar appliance to test it).

The washing machine will not start... and the "Start/Pause" indicator lamp flashes.

Check whether:

- the door is properly closed (child safety);
- the **"Start/Pause"** button has been pressed;
- the "Water tap closed" indication lights up. Open the water tap and press the **"Start/Pause"** button.

The appliance stops during the programme (varies depending on model)

Check whether:

- the "Rinse Hold" indicator lamp lights up; terminate this option by pressing the **"Start/Pause"** button or by choosing and starting the **"Drain"** programme;
- another programme has been selected and the **"Start/Pause"** indicator lamp is flashing. Reselect the desired programme and press the "**Start/Pause"** button.
- the door has been opened and the **"Start/Pause"** indicator lamp is flashing. Close the door and press the "Start/Pause" button again.
- Check if there is much foam inside,machine enters kill-foam routine.The machine will run again automatically after a period.
- the washing machine's safety system has been activated (see "Fault description table").

Residue from detergent and additives left in the detergent drawer at end of wash.

Check whether:

- the cover grid of the softener chamber and the separator of the main wash chamber are correctly installed in the detergent dispenser and all parts are

clean (see “Care And Maintenance”);

- sufficient water is entering. The mesh filters of the water supply could be blocked (see “Care and Maintenance”);
- the position of the separator in the main wash chamber is adapted to the use of powder or liquid detergent (see “Detergent and Additives”).

Machine vibrates during spin cycle.

Check whether:

- the washing machine is level and standing firmly on all four feet;
- the transport bolts have been removed. Before using the machine, it is imperative that the transport bolts are removed.

Final spin results are poor.

The washing machine has an imbalance detection and correction system. If individual heavy items are loaded (e.g. bathrobes), this system may reduce the spin speed automatically or even interrupt the spin completely if it detects too great an imbalance even after several spin starts, in order to protect the washing machine.

- If the laundry is still too wet at the end of the cycle, add smaller articles of laundry and repeat the spin cycle.
- Excessive foam formation may prevent spinning. Use the correct amount of detergent.
- Check that the spin speed selector has not been set to “0”.

If your washing machine has a time display: the programme time initially displayed is lengthened / shortened by a period of time:

This is a normal capacity of the washing machine to adapt to factors that can have an effect on the wash programme time, e.g.:

- excess foam formation;
- load imbalance due to heavy items of laundry;
- prolonged heating time due to reduced inlet water temperature;

Because of influences like these, the time remaining in the programme run is recalculated, and updated if necessary. In addition, during the filling phase, the washing machine determines the load and if necessary adjusts the initial programme time displayed accordingly. During such update periods, an animation appears on the time display.

Hot / cold fill fault

If you wish to connect hot and cold water supply (Fig.1):

1. Fix the red marked inlet hose at the hot water tap and at the inlet valve with the red filter on the rear side of machine.
2. Fix the other inlet hose at the cold water tap and at the inlet valve with the blue filter on the rear side of the machine.

Make sure:

a) The connections are tightly fixed

b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

If you wish to connect only the cold fill follow the below instruction (Fig.2):

1. You need a Y-piece connector.This can be purchased from local hardware or plumbing supplier.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves present on the rear part of the machine to the Y-piece connector using the relative provided hoses.

Make sure:

All connections are tightly fixed.

Do not allow children to operate, crawl on, near or inside your washer.
Note that during wash cycles, the surface temperature of the porthole door may increase.
Close supervision of children is necessary when the appliance is used near children.

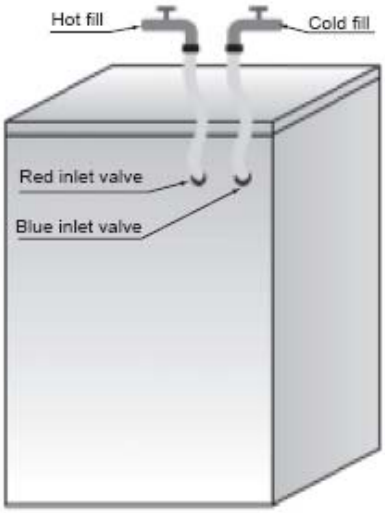
Hot fill
Cold fill
Red inlet valve
Blue inlet valve

Fig.1

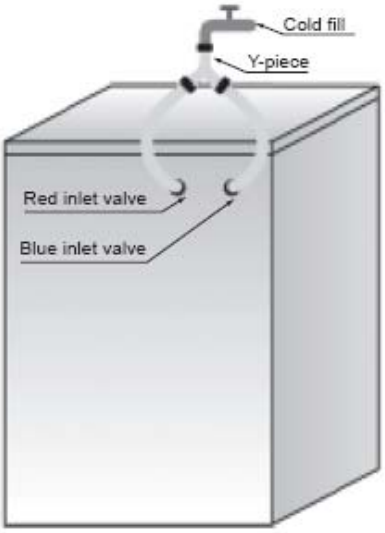
Cold fill
Y-piece
Red inlet valve
Blue inlet valve

Fig.2

Fault description table

Red indication light is on	Digital display (if fitted on your machine)	Fault description
"Water tap closed"	"FH"	"Water supply fault"
"Clean pump"	"FP"	"Draining fault"
	from "F02" to "F35" or "FA" or "Fod"	"Electrical module fault" "Waterstop fault" "Overfoaming"

a. "Water tap closed" indication lights up

The appliance has no or insufficient water supply.For models with remaining time display, "FH" appears on that display. The **"Start/Pause"** indicator flashes.

Check whether:

- the water tap is fully open and there is sufficient water supply pressure.
- kinks are present in water hose.
- the mesh filters of the water supply are blocked (see "Care And Maintenance"/"Mesh Filters For Water Connection").
- the water hose is frozen up.

After the problem has been removed, restart the programme by pressing **"Start/Pause"** again. If the fault occurs again, contact After-Sales Service (see "After-Sales Service").

b."Clean pump" indication lights up

Waste water is not pumped out. The "Clean pump" indication lights up. For models with a remaining time display, "FP" appears on that display.

The washing machine stops in the appropriate programme step.

Unplug the appliance.

Check whether:

- kinks are present in the drain hose;
- the pump or the filter is blocked (see "Removing The Filter").

IMPORTANT: make sure the water has cooled before draining the appliance.

- the drain hose is frozen up.

Plug in the appliance again.

Select and start the "Drain" programme or push the "Reset" button for at least 3 seconds and restart the desired programme.

If the fault occurs again, please contact After-Sales Service (see "After-Sales Service").

c. Error code

The appliance stops during the programme.

For models with a remaining time display, a failure code between "F02" and "F35" , "FA" or "Fod" appears on that display. For models without display,the programme sequence indicator will show the failure code by the combination of LED lights.

If a failure code between "F02" and "F35" appears on the display:

Select and start the "Drain" programme or push the "Reset" button for at least 3 seconds.

Then select and start the desired programme again. If the fault persists, unplug the appliance and contact After-Sales Service (see "After-Sales Service").

If failure code "FA" appears on the display:

Switch the appliance off, pull out the mains plug and turn the water tap off. Tilt the appliance forward carefully to allow the collected water to flow out from the bottom of the appliance.

Then:

1 connect the appliance to the electrical supply;

2 turn the water tap on (if water immediately flows into the appliance again, without the appliance being started, there is a failure. Turn off the tap and notify After Sales Service);

3 select and start the desired programme again. If the failure occurs again, unplug the appliance and contact our After Sales Service (see "After Sales Service").

If failure code "Fod" appears on the display:

Too much foam interrupted the washing programme. Avoid excessive detergent dosing.

1 Select and start the "Rinse & Spin" programme.

2 Afterwards, select and start the desired programme again, using less detergent. If the fault persists, unplug the appliance and contact our After Sales Service.

AFTER-SALES SERVICE

Before contacting After-Sales Service:

1 Try to remedy the problem yourself (see "Troubleshooting Guide").

2 Restart the programme to check whether the problem has solved itself.

3 If the washing machine continues to function incorrectly, call After-Sales Service.

Specify:

- The nature of the problem.

- The washing machine model.
- The service code (number after the word SERVICE).

The After-Sales Service sticker can be found inside the door.

- Your full address.
- Your telephone number and area code. After-Sales Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.

ACCESSORIES

Via our After-Sales Service or your specialist dealer, you can purchase:

- a Pedestal Drawer which can be installed beneath your washing machine. It raises your machine to allow for more comfortable loading and unloading, as you now no longer need to bend as far to access the unit. Furthermore, it offers a great space-management tool and storage solution.
- a Stacking Kit by means of which you can fix your dryer on top of your washing machine and thus effectively save space.

Some models are able to be installed under your kitchen worktop; in that case, please contact our After-Sales Service (see above). Be aware that:

- the appliance **MUST** be installed under a continuous worktop.
- according to the legal safety regulations, the installation of the appliance **MUST** be carried out by an authorized technician or by our After-Sales Service.
- the appliance **MUST** be installed using the intermediate cover panel of the **UBS Base Set** which can be purchased from specialist dealers or our After-Sales Service.

TRANSPORT / HANDLING

Never lift the appliance by the worktop when transporting.

1 Pull out the mains plug.
2 Turn off the tap.
3 Disconnect the inlet and drain hoses.
4 Eliminate all water from the hoses and from the appliance (see

"Removing the Filter", "Draining Residual Water").

5 Fit the transport bolts (obligatory)

6 The machine is 75Kg in weight, two persons are needed to move it.

ELECTRICAL CONNECTION

Only use a socket with an earth connection.

- Do not use extension leads or multi sockets.
- Electrical supply must be large than machine's working current 10A
- Electrical connections must be made in accordance with local regulations.

Whirlpool is a registered trademark of Whirlpool USA
4619 704 23602